



# USER MANUAL

VGA UTP Extender 1X1 Splitter with Audio

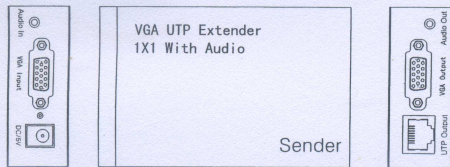

## Receiver

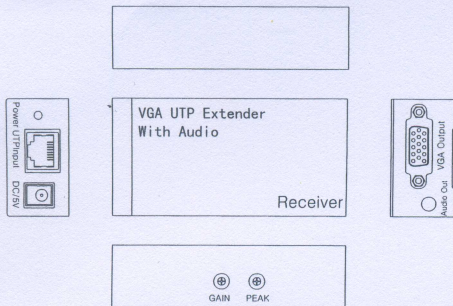

## 5.0 CONNECTION AND OPERATION

- 1) Connect the single VGA source to the main VGA input using a piece of VGA cable.

VGA UTP Extender 1X1 Splitter with Audio

- 2) Connect VGA output of the Sender to a local display and Audio output of the Sender to a local Sounder
- 3) Connect Sender and each Receiver using a piece of each pieces of CAT-5e/6
- 4) Connect VGA outputs of Receivers to remote displays and Audio output of Receivers to remote sounders.
- 5) Plug one 5V@ 1A power supply into the VGA UTP 1X1Splitter and the others 5V@1A power suppliers to Receiver.

Attention: Insert / Extract cable gently.

## 5.1 CONNECTION DIAGRAM

