


### 3. Part Name and its functions

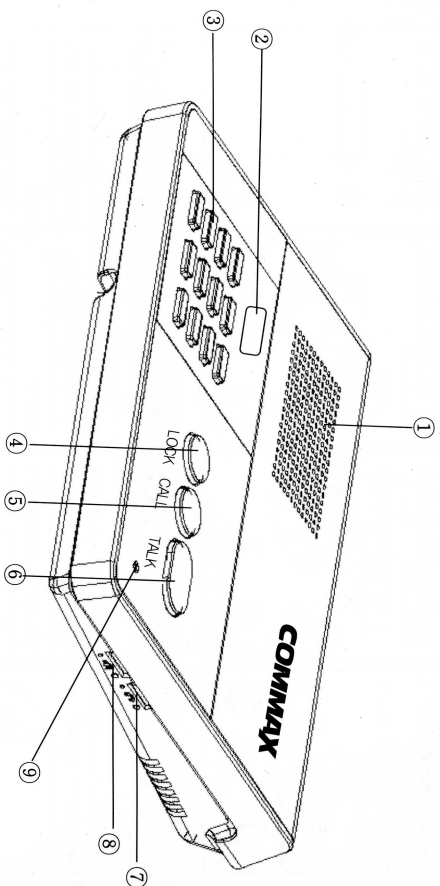


3-1 CM-810 Parts Name

NO	Description
①	Speaker
②	Display
③	Ten-key
④	LOCK(Priority Call)
⑤	CALL
⑥	TALK
⑦	Volume Control Dial
⑧	Call Sound Volume Control Dial.
⑨	MIC

- Volume Control Dial: it is to adjust the voice level from CM-800S.
- Ring Sound Volume Control Dial.: it is to adjust the ring sound level from CM-800S.

This product is open voice type.

Pressing "Talk" button will start communication and then pressing "Talk" again will end it.

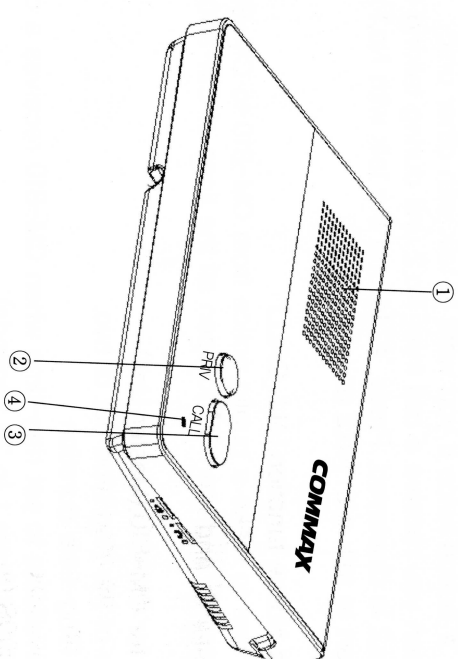

3-2 CM-800S Part Names

NO	Description
①	Speaker
②	Privacy Button
③	CALL Button
④	C-MIC

### 4. Operation

#### 4-1 CM-810

##### \*\* Making a call to CM-800S.

1) Press the desired number of CM-800S to talk and then "#" button.

The "beep" sound is heard.

Ex) paging first CM-800S: "1 + # (beep)"

- Wrong number makes "Error" sound. (It's available from 1 to 10)
- Pressing "\*" button to conceal the registration of wrong number.

2) After the communication line is opened, pressing the "call" button to make a ring.

Ex) Paging first CM-800S: "1 + # (beep)" + "call" button.

- During keep pressing "call" button only, there is a ring.