




### 3. Names and function of each part

3-1 Name of each part of CM-810M

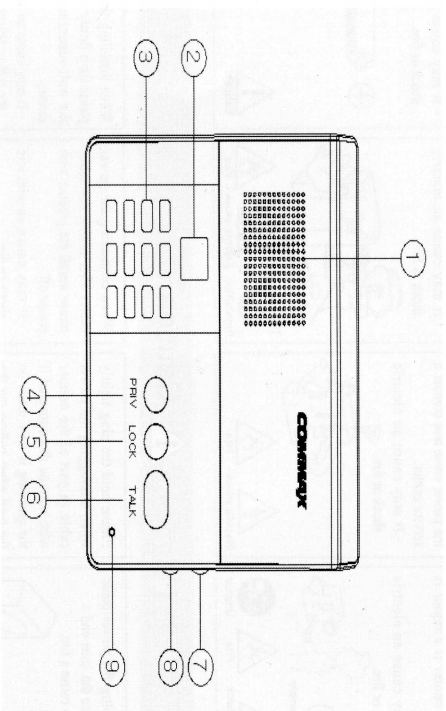

NO	Description
①	Speaker
②	FND display unit
③	Ten key
④	PRIVACY function
⑤	LOCK(Hands-free communication)
⑥	TALK(Conversation)
⑦	Receiver Volume Control
⑧	Call Sound Volume Control Dial
⑨	MIC

- Receiver Volume Control: Regulating of voice of opponent, coming from outside.
- Calling Out Volume Control: it regulates volume of calling sound.
- PRIVACY Button: when this button is pushed, even under communication, voice of this person will not be transmitted to the other party. (preventing of eavesdropping is possible)

As CM-810M does not have a handset, you should press "Talk" button, during conversation, and press again one more time "Talk" button in order to finish conversation.



### 4. Operational functions

#### 4-1 Setting methods before usage and precautions

- 1) Setting of Melody ID
  - If you press for 2 seconds button "\*", beep voice will sound and bell sound will enter setting mode.
  - Word "Sd (SOUND)" will be shown in Display window, and current number of melody (initial number: 01) will flicker.
  - At this moment, if you press 1 or 2, appropriate melody will be in effect.
  - After melody is selected, push button "#" and finish melody selection.
  - By pressing melody selection and button "#", device will be automatically enter to ID setting mode
  - ID in display window, and current ID (initial number: 01) will be sequentially flickered.
  - After setting of ID is done, press "\*" and setting for use will be over.

#### 2) Precautions

- Setting of ID should be done from 1 to 10 according to wiring state.
- In order to go over among Melody and ID setting, press "\*" + (Example): For setting only ID : pressing about 2 seconds button "\*" + button "\*" + set ID number + button "#"
- For setting only melody: pressing about 2 seconds "\*" + Number of setting melody + button "\*" + "
- After entering into setting mode, if you do not press any button for 10 seconds, it will automatically go to initial state.

#### 5-2 Master Station\_CM-810M How to use, guidelines for CM-810M

##### \*\* When you want to call and begin to talk

- 1) Press ID number of device to be called and then press button "#".
- 2) If bell lasts over 1.5 seconds, conversation mode automatically opens.  
Example: Calling to ID number 1: press "1 + #" (Bell sound will occur)"
- When you press wrong number, error beep sound will occur.  
(it is possible to call from 1 to 10, and impossible to call into its ID number).
- When you enter wrong number, press "\*" and it will be annulated.
- 3) When calling, press Talk button and speak, release Talk Button, when listening.
- When talking is over, press again button"#and finish conversation.

##### \*\* When you are called from other unit and want to speak

- 1) If there is a call coming from another unit, you will see in display window "A(call)" words appear, after 1.5 seconds it get automatically in to speaking mode with appearing of "N" in display.
- 2) During of transmission it is possible to talk without handling any button.
- 3) If you press privacy button, it will be impossible to make eavesdropping over master unit.