


## ■ CONTROL AND FUNCTIONS

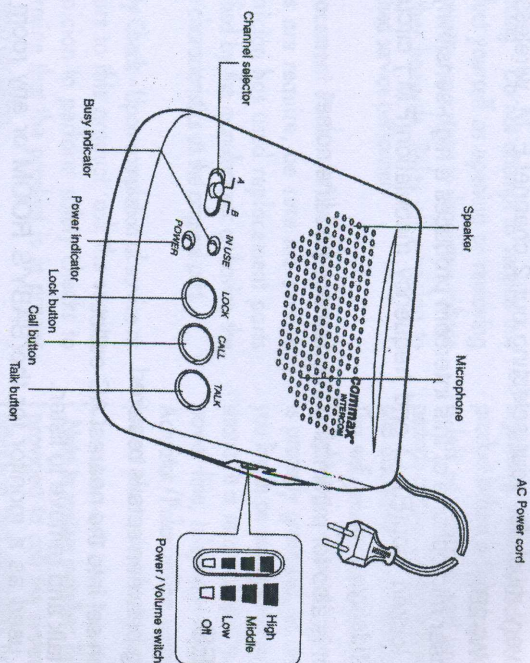


## ■ OPERATION

1. Simply plug each unit into an AC outlet.
2. Set each intercom station to the desired channel by setting the channel selector to the A or B
3. Turn on the power/volume switch to ☐ (OFF), ☒ (LOW), ☒ (MIDDLE) or ☒ (HIGH).
4. To page another station, press the call button, and this will produce a call tone on the same channel to all other units.
5. In order for the receiving station to respond, press the talk button to talk and release to listen. Speak in a normal voice from arms length for best results.
6. To listen to a reply, remove your finger from the talk button, and the other station can now send a message.
7. For dictating or sending long messages, just push the lock button down and talk as long as you want.
8. In order to listen to the reply, you need to push the lock button down to release it. This will allow a reply to be received from any station.

Note : When a station is locked into the talk mode, it cannot receive a message or call tones from other stations.

## ■ OPERATION RANGE

Communication must be between operated locations on the same power transformer.  
Avoid locations where there is a sub-transformer between them.

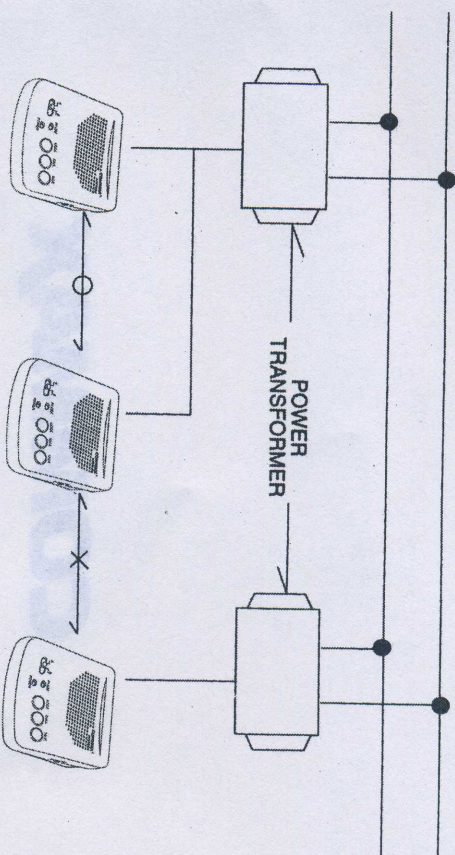

## ■ SPECIFICATIONS

Power source .....	AC 110 -120V, 60Hz
Power consumption .....	AC 220 -240V, 50Hz
Frequency .....	Ch A : 230KHz
	Ch B : 260KHz
	(European) 120KHz, 140 KHz
R.F Output power .....	100 mW
Audio output power .....	500 mW
Dimension .....	143(W) × 136(D) × 40(H)mm
Weight .....	425g