


■ OPERATING INSTRUCTIONS

1. Simply plug ① each unit into an AC outlet.
2. Set each intercom station to the desired channel by setting the channel selector ⑦ to the A, B, C or D position.
3. Turn the volume controls ② on both units until the unit click on.
4. To call a station, momentarily press the CALL button ⑤.
This will produce a call tone on the same channel and signals that the call is ready.
5. When the receiving station responds, press the TALK button ④ to talk.
Speak in a normal voice from arms length for best results.
6. To listen for a reply, remove your finger from the TALK button ④ the station can now receive a message.
7. For dictating or sending lengthy messages, you can lock down the LOCK button ⑥ by one touch press.
8. To listen for the reply, you would then lock down the LOCK button ⑥ to release the lock by one touch press.

Note: When a station is locked into the TALK mode, it cannot receive messages or call-tones from other stations.

■ FEATURES


- * No wiring between sets is required.
- * Plug the set into nearest AC outlet.
- * Push to talk and release to listen.
- * Can be used as a monitor for the baby's room or any room in the house.

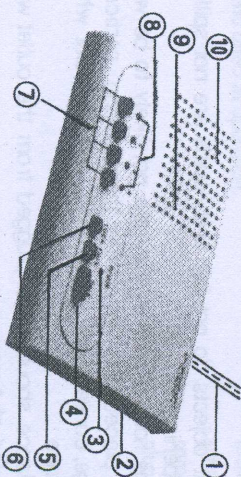

1. AC power cord
2. Volume ON/OFF
3. In use lamp
4. TALK button
5. CALL button
6. LOCK button
7. Channel selector
8. Channel indicate lamp
9. Microphone
10. Speaker

■ OPERATION RANGE

Communication between operated locations on the same power transformer.
Avoid locations where there is a sub-transformer between them.

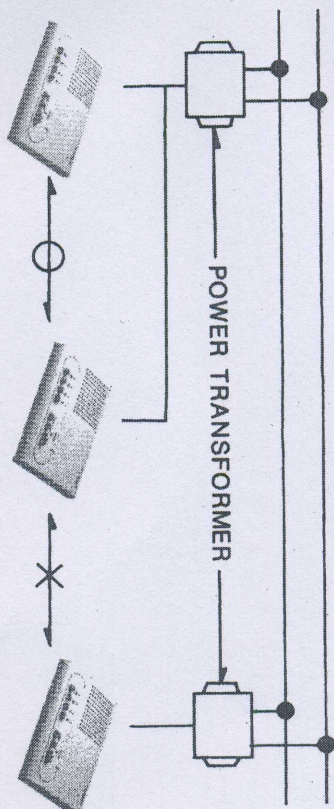

■ SPECIFICATIONS

Power source.....	AC 110/120/220/230/240V, 50-60Hz
Carrier Frequency	CH A:230KHz CH B:260KHz CH C:290KHz CH D:200KHz
R. F Output power	100mW
Audio Output power	500mW
Modulation method.....	FREQUENCY MODULATION(F. M)
Transmission & Reception	PHASE LOCKED LOOP(P.L.L)
Dimension	182(W)x140(D)x43(H) mm
Weight	600g/pc